



**Simplicity**  
A U S T R A L I A

# AIRSEEDER OPERATORS MANUAL

**Model:** FM1 2000  
**Serial No:**  
**Description:** Front Mount, 2000 litre, 1 bin,  
Electric Drive

*For Instruction On:*

Front Mounted Machine Configuration  
Eagle Controller Operation  
Electric Drive Operation

## Section 1: Introduction

Welcome to Simplicity Australia	Page 1.1
Company Profile	1.2
Product Overview	1.3

## Section 2: Safety

Safety Instructions – ‘Key Words’	Page 2.1
Location of Safety Decals – LHS and Rear	2.2
Location of Safety Decals – RHS and Front	2.3
Road and Field Travel	2.4

## Section 3: Operation

Hooking up	Page 3.1
Filling and Emptying the Bins	
• Filling	3.2
• Emptying	3.3
Air Seeder Calibration	
• Variable Seed Rate Control Overview	3.4
• Calibrating Sowing Rates	3.5 – 3.6
Calibrating Sowing Rates	
• Tips for Calibrating Sowing Rates	3.7
• Gear Ratios Explained / Higher Sowing Rates	3.7 – 3.8
• Product Flow (Bridging)	3.8
Air Delivery System	
• Overview	3.9
• Setting the Blower Speed	3.10
• Checking Blower Speed	3.10
• Delivery Capacity and Calculating Delivery Rate	3.11
Double Shooting and Splitting	
• Description and Background	3.12
• Illustration ‘One Pass Application’	3.13
• Plan View – Four Row Double Shoot	3.14
• Worksheet – Double Shooting and Splitting	3.15
Use of Air Restrictors	3.16
Use of Metering Unit Spool Covers	3.17
Use of Canola Covers	3.18
Blocking Air Streams not in Use	3.18
Notes	3.19
Calculating Bin Capacity	3.20
Seeding Kit Terminology	3.21–3.24
Seeding Kit Set Up	3.25–3.26
Monitor Description	3.27
Software and Hardware Version	3.28



# Contents

## Section 4: Maintenance

Lubrication and Maintenance Overview	Page 4.1
Daily Checklist	4.2
After Sowing Maintenance	4.3
Lubrication and Maintenance Schedule	4.4
Location of Grease Points and Lube Intervals	4.5
Blower Maintenance	4.6
Hydraulic Filter Replacement	4.7
Air Leak Check	4.8-4.10
Service and Repair Records	4.11
Notes	4.12

## Section 5: Troubleshooting

Sowing Operation	Page 5.1, 5.2
Blower Operation	5.3
Notes	5.4

## Section 6: Miscellaneous

Useful Formulae	6.1
Risk Assessment	6.2
Notes	6.3
Disclaimer	Rear cover