



Simplicity
A U S T R A L I A

AIRSEEDER OPERATORS MANUAL

Model: TQC2 6000
Serial No:
Description: Trailing Castoring Quad, 6000 litre,
2 bin, Ground Drive Linear Actuator
Options Small Seeds Box

For Instruction On:

Castoring Machine Configuration
Linear Actuator Operation
Eagle Controller Operation
Small Seeds Box Operation

Section 1: Introduction

Welcome to Simplicity Australia	Page 1.1
Company Profile	1.2
Product Overview	1.3

Section 2: Safety

Safety Instructions – ‘Key Words’	Page 2.1
Location of Safety Decals – LHS and Rear	2.2
Location of Safety Decals – RHS and Front	2.3
Road and Field Travel	2.4

Section 3: Operation

Hooking up	Page 3.1
Filling and Emptying the Bins	
• Filling	3.2
• Emptying	3.3
Air Seeder Calibration	
• Variable Seed Rate Control Overview	3.4
• Calibrating Sowing Rates	3.5 – 3.6
• Compaction Warning	3.6
Calibrating Sowing Rates	
• Tips for Calibrating Sowing Rates	3.7
• Calibration & Compaction Crank Handle Stowage	3.7
• Higher Sowing Rates	3.8
• Product Flow (Bridging)	3.8
• Variable Seed Rate Control Calibration Check Method	3.9 – 3.10
• Record of Check Method Results	3.10
Air Delivery System	
• Overview	3.11
• Setting the Blower Speed	3.12
• Checking Blower Speed	3.13
• Delivery Capacity and Calculating Delivery Rate	3.13
Double or Triple Shooting and Splitting	
• Description and Background	3.14
• Illustration ‘One Pass Application’	3.15
• Plan View – Six Row Double Shoot	3.16
• Worksheet – Double or Triple Shooting and Splitting	3.17
Use of Air Restrictors	3.18
Use of Metering Unit Spool Covers	3.19
Use of Canola Covers	3.20
Blocking Air Streams not in Use	3.20
Notes	3.21
Calculating Bin Split	3.22
Bin Split Plan	3.23
Changing Bin Split	3.24
Seeding Kit Terminology	3.25–3.28
Seeding Kit Set Up	3.29–3.30
Monitor Description	3.31
Software and Hardware Version	3.32

Section 4: Maintenance

Lubrication and Maintenance Overview	Page 4.1
Daily Checklist	4.2
After Sowing Maintenance	4.3
Lubrication and Maintenance Schedule	4.4
Location of Grease Points and Lube Intervals	4.5
Oil Levels	4.6
Blower Maintenance	4.7
Hydraulic Filter Replacement	4.7, 4.8
Clutch Maintenance	4.8
Air Leak Check	4.9-4.12
Service and Repair Records	4.13
Notes	4.14

Section 5: Troubleshooting

Sowing Operation	Page 5.1, 5.2
Blower Operation	5.3
Notes	5.4

Section 6: Miscellaneous

Tyre Pressure Guide	Page 6.1
Useful Formulae	6.2
Risk Assessment	6.3
Notes	6.4
Disclaimer	Rear cover